



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

251-265-303C

Front Heater Core - Vanagon

Install the supplied foam in the highlighted areas in order to seal the heater core in the heater box and ensure that all of the air is directed through the core and not around it.

- 1) Install a continuous strip around the heater core, starting between the nipples and going all the way around the outside circumference.
- 2) Install four additional strips (total) on the front and back face at each edge of core.
- 3) An additional loop of foam should go around the nipples to block any air from escaping around them. Place the core in the box to see where along the nipples the foam needs to be placed in order to be effective.



GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

251-265-303C

Front Heater Core - Vanagon

Install the supplied foam in the highlighted areas in order to seal the heater core in the heater box and ensure that all of the air is directed through the core and not around it.

- 1) Install a continuous strip around the heater core, starting between the nipples and going all the way around the outside circumference.
- 2) Install four additional strips (total) on the front and back face at each edge of core.
- 3) An additional loop of foam should go around the nipples to block any air from escaping around them. Place the core in the box to see where along the nipples the foam needs to be placed in order to be effective.

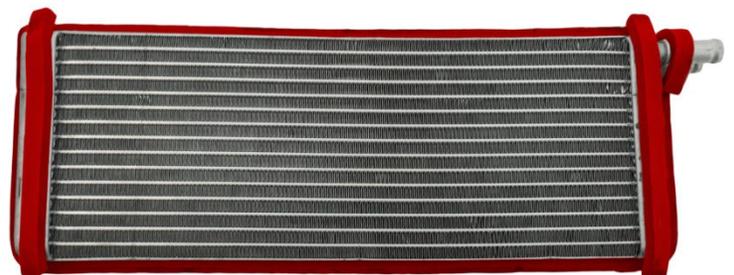

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com