


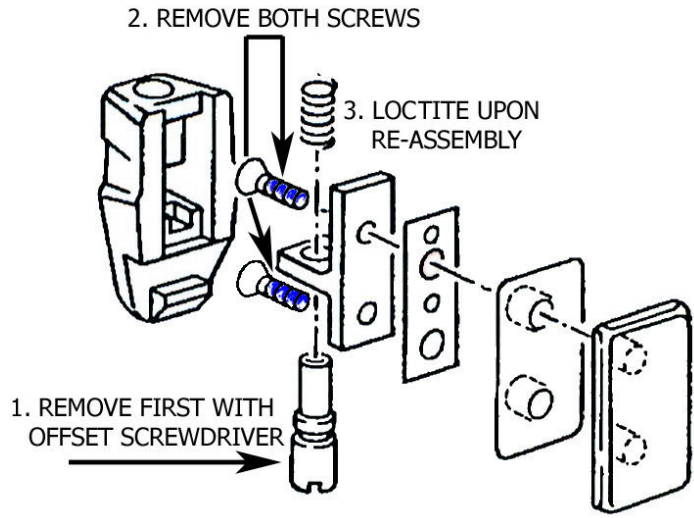

Sliding Window Latch Repair Kit

This kit provides the parts prone to wear out/cause slop in the sliding window latch assembly. Also includes an offset slotted screwdriver to remove the latch from the window.

Using the exploded diagram as a reference, remove the latch assembly from the window glass. Assembly with the new parts is reverse of removal. Often the two Phillips-head screws will become loose over time (causing slop in the latch), so be sure to use a bit of Loctite upon assembly to keep the latch tight over time.



Sliding Window Latch Repair Kit

This kit provides the parts prone to wear out/cause slop in the sliding window latch assembly. Also includes an offset slotted screwdriver to remove the latch from the window.

Using the exploded diagram as a reference, remove the latch assembly from the window glass. Assembly with the new parts is reverse of removal. Often the two Phillips-head screws will become loose over time (causing slop in the latch), so be sure to use a bit of Loctite upon assembly to keep the latch tight over time.

