



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

7P-ABS-LF

ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon


You will note the recessed section on the back of your panel. This recess section is designed to fit the original ash tray. This section is an optional feature that can be removed if desired. For more information, reference the diagram on the following page.

For the "regular-style" fasteners:

When securing the panel with the regular-style plastic fasteners, be sure to screw in each fastener snugly (don't over-tighten) using a Phillips-head screwdriver. Do not push the clips in without turning them. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

For the "deluxe-style" fasteners:

Place the rubber riv-nuts into the holes in the steel body panel or door onto which you are installing the panel. Then put the panel in place and thread the screws through the washer and hole in the panel into the riv-nut. (NOTE: Do NOT push them in—SCREW them in. Otherwise, you may push the riv-nut through and into the hole in which it is loosely placed!) Tightening the machine screw into the riv-nut will cause the riv-nut to expand in the hole in which it is placed and will hold the panel securely in place. See the diagram on the right.

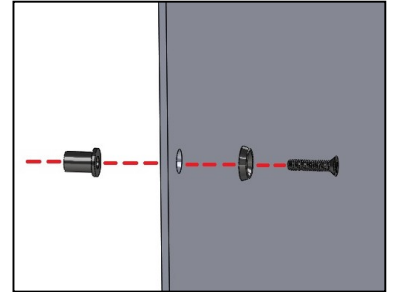


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

7P-ABS-LF

ABS Plastic Driver's Side Front Panel for 7-Passenger Vanagon

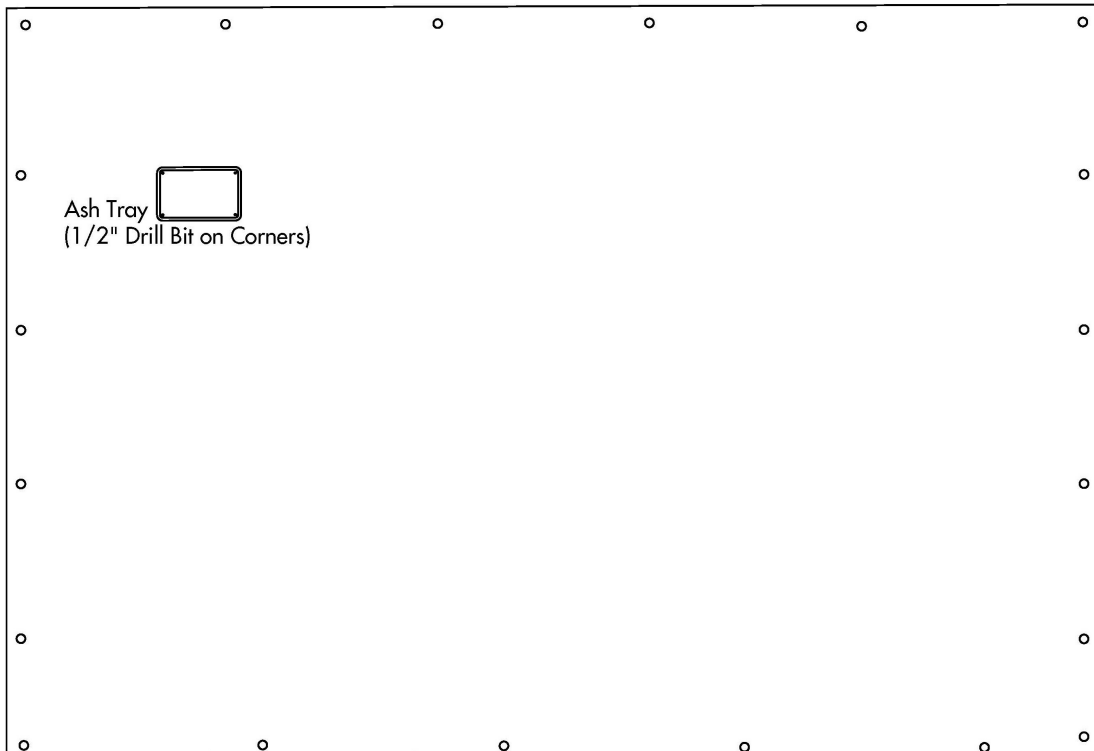

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com