



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## 7P-ABS-LR-FH

### ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon


**COMPLETE REAR SEAT REMOVAL NOT REQUIRED.** These panels are made to be a universal fit regardless of various options. Use the appropriately-sized hole saw, rotary tool, or saw to cut the necessary recessed sections located on the back of each panel. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular options. Not all recesses will need to be cut out.** See the diagram on the back of this sheet for a description of each recessed section.

#### For the "regular-style" fasteners:

*When securing the panel with the regular-style plastic fasteners, be sure to screw in each fastener snugly (don't over-tighten) using a Phillips-head screwdriver. Do not push the clips in without turning them. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.*

#### For the "deluxe-style" fasteners:

*Place the rubber riv-nuts into the holes in the steel body panel or door onto which you are installing the panel. Then put the panel in place and thread the screws through the washer and hole in the panel into the riv-nut. (NOTE: Do NOT push them in—SCREW them in. Otherwise, you may push the riv-nut through and into the hole in which it is loosely placed!) Tightening the machine screw into the riv-nut will cause the riv-nut to expand in the hole in which it is placed and will hold the panel securely in place. See the diagram on the right.*

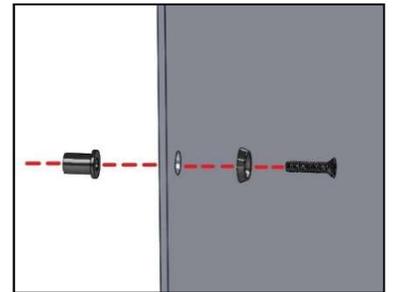


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## 7P-ABS-LR-FH

### ABS Plastic Driver's Side Rear Quarter Panel (Front Half) for 7-Passenger Vanagon

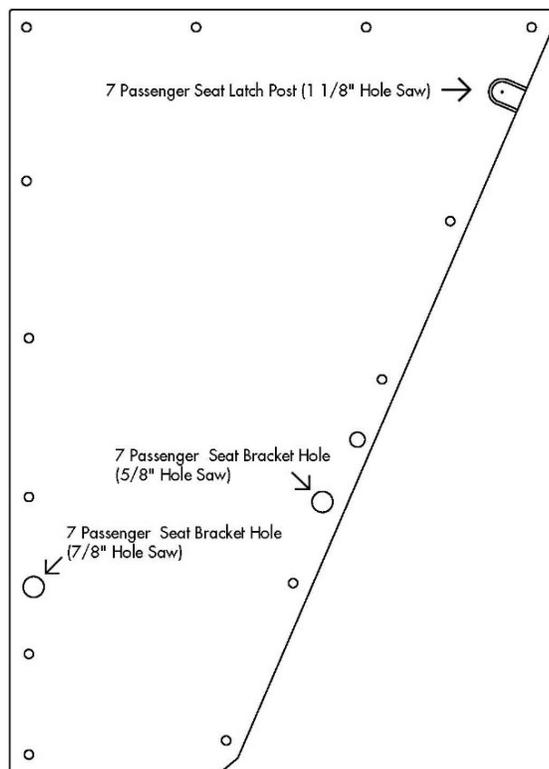

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • [www.gowesty.com](http://www.gowesty.com)