





These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

AUX-STN-LiFePO4-BRKT Battery Mounting Kit for Vans without Swivel Seat

1980-1992 Vanagon

This kit is intended to mount a GoWesty LiFePO4 battery under your driver seat (non-swivel).

1. Slide the driver's seat all the way forward and tape the box lid open
2. Use the included sheet metal screw to attach the "L" bracket into the groove at the bottom of the battery box. Locate the sheet metal screw between the two spot welds as shown. **Make sure the underside is clear before drilling.**
3. Place the battery into the box on its side with the terminals on top and facing the front of the van. Make sure the "L" bracket is snug on the battery, adjust if necessary.
4. Poke out the backing sticker for the bolt hole.
5. From under the van insert the included M8 bolt with washer through the hole, then set the bracket on followed by a washer, lock washer, and finally the included M8 nut.
6. Tighten everything down, give the battery a shake, and tighten one last time.

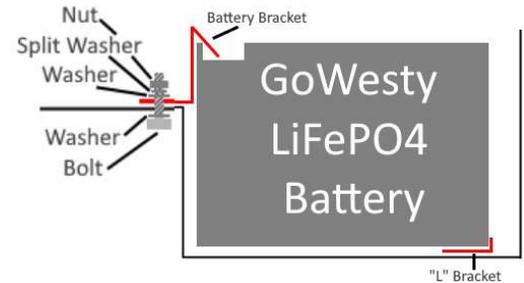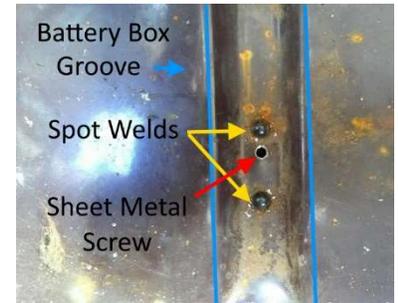

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com





These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

AUX-STN-LiFePO4-BRKT Battery Mounting Kit for Vans without Swivel Seat

1980-1992 Vanagon

This kit is intended to mount a GoWesty LiFePO4 battery under your driver seat (non-swivel).

1. Slide the driver's seat all the way forward and tape the box lid open
2. Use the included sheet metal screw to attach the "L" bracket into the groove at the bottom of the battery box. Locate the sheet metal screw between the two spot welds as shown. **Make sure the underside is clear before drilling.**
3. Place the battery into the box on its side with the terminals on top and facing the front of the van. Make sure the "L" bracket is snug on the battery, adjust if necessary.
4. Poke out the backing sticker for the bolt hole.
5. From under the van insert the included M8 bolt with washer through the hole, then set the bracket on followed by a washer, lock washer, and finally the included M8 nut.
6. Tighten everything down, give the battery a shake, and tighten one last time.

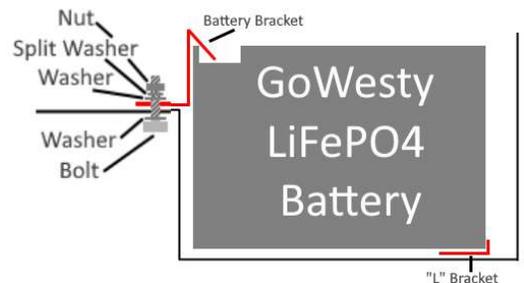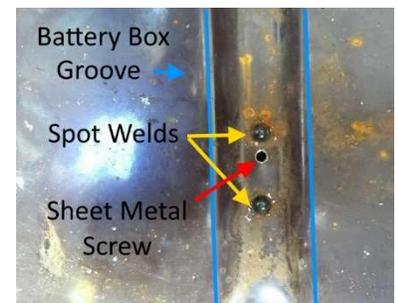

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com