




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-025-133-317-HEX GoWesty Designed Vanagon Fuel Rails

Installation Notes:

- Ensure the inside of the fuel rail is clean and free of any debris.
- Apply the provided thread sealant around the bottom three threads of each fitting and assemble the fuel rail finger tight, as pictured in the diagram to the right.
- Tighten each fitting (starting with the nipples) 3/4 to 1-3/4 turns *past* finger tight*. It may be necessary to brace the rail against a sturdy surface or place it in a vise to properly tighten the end plug.
- Allow the sealant to cure for a full 24 hours before installation.

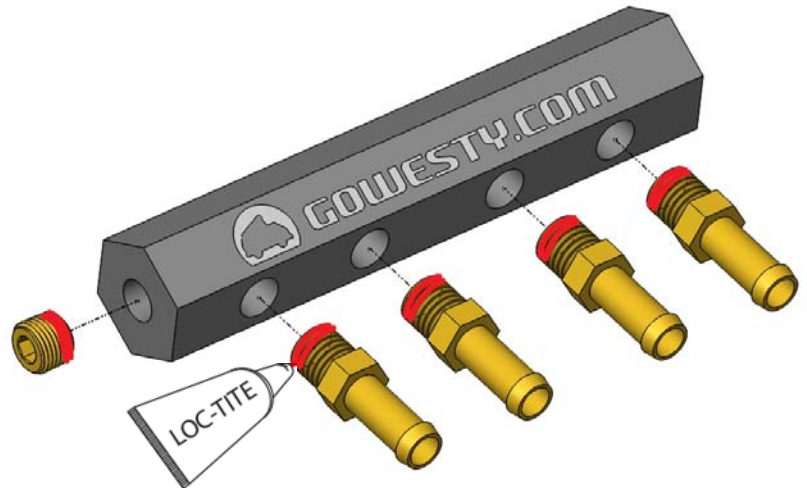

** The nipples require a 7/16" box-end wrench or socket; the end plugs require a 3/16" internal hex (Allen key).*

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-025-133-317-HEX GoWesty Designed Vanagon Fuel Rails

Installation Notes:

- Ensure the inside of the fuel rail is clean and free of any debris.
- Apply the provided thread sealant around the bottom three threads of each fitting and assemble the fuel rail finger tight, as pictured in the diagram to the right.
- Tighten each fitting (starting with the nipples) 3/4 to 1-3/4 turns *past* finger tight*. It may be necessary to brace the rail against a sturdy surface or place it in a vise to properly tighten the end plug.
- Allow the sealant to cure for a full 24 hours before installation.

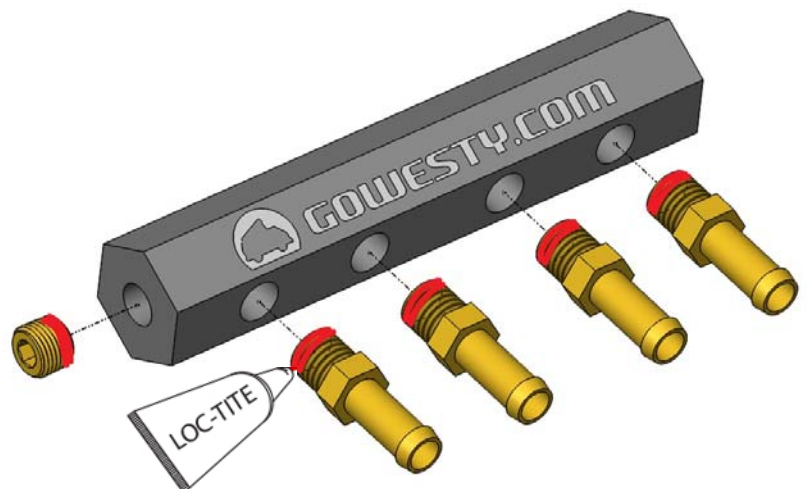

** The nipples require a 7/16" box-end wrench or socket; the end plugs require a 3/16" internal hex (Allen key).*

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com