



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-251-881-253

SEAT FORE/AFT ADJUSTMENT KNOB

INSTALLATION INSTRUCTIONS

1. If necessary, remove the old knob by twisting it back and forth while pulling it toward the front of the seat.
2. Test fit the new knob. It should fit snugly over the rod.

The following steps permanently attach the handle using epoxy. This epoxy has a handling time of 3 hours, and reaches handling strength after 18 hours. Avoid using the seat adjustment knob during this time.

3. Lay a paper towel or a rag on the surfaces around your seat adjustment rod, to catch any stray drops of epoxy.
4. Find a disposable work surface and mix the two part epoxy. Use the included mixing rod to keep your hands clean, as shown in the diagrams on the right side of this page.
5. Carefully drop a *small amount* of epoxy in the knob's mounting hole, and mount the knob on the adjustment rod.
6. Clean up any excess epoxy immediately.




FOLD



SNIP



SQUEEZE

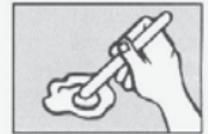

MIX/APPLY

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-251-881-253


SEAT FORE/AFT ADJUSTMENT KNOB

INSTALLATION INSTRUCTIONS


1. If necessary, remove the old knob by twisting it back and forth while pulling it toward the front of the seat.
2. Test fit the new knob. It should fit snugly over the rod.

The following steps permanently attach the handle using epoxy. This epoxy has a handling time of 3 hours, and reaches handling strength after 18 hours. Avoid using the seat adjustment knob during this time.


3. Lay a paper towel or a rag on the surfaces around your seat adjustment rod, to catch any stray drops of epoxy.
4. Find a disposable work surface and mix the two part epoxy. Use the included mixing rod to keep your hands clean, as shown in the diagrams on the right side of this page.
5. Carefully drop a *small amount* of epoxy in the knob's mounting hole, and mount the knob on the adjustment rod.
6. Clean up any excess epoxy immediately.

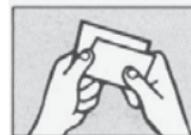

FOLD

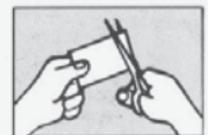

SNIP

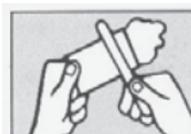

SQUEEZE



MIX/APPLY

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com