



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


GVW-251-943-139-FIX

Rear License Plate Light Housing Reinforcement Bracket
1980-1991 Vanagon

Vanagon license plate light housings have seen better days. These plastic housings were simply not designed to last for 30 plus years! GoWesty's stainless steel brackets are designed to secure these housings without depending upon the brittle plastic arms or lip that have frequently fractured off.

DISCLAIMER: *This kit was designed to fit a stock Vanagon and Vanagon License plate light housing. Many housings and bodies are damaged, rusted, or warped. This kit will not perfectly secure every housing but has been optimized to secure as many housings as possible.*

Tools Required 
#2 Phillips Head Screwdriver
Hardware List 
(2) Nylon Washers
Parts List 
(1) Reinforcement Bracket

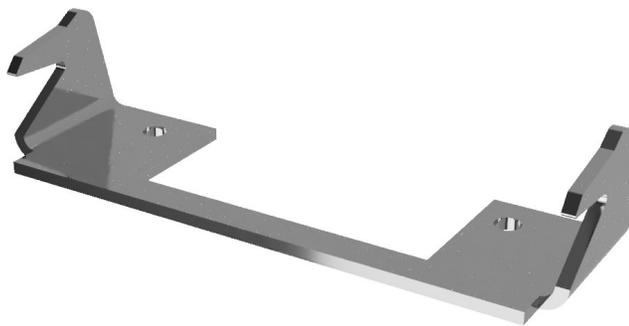

Installation Instructions

- 1) Begin by removing the existing light housing from the van. This can be done by depressing the plastic arms with your thumbs and pulling outward with your index fingers. The housing should slide out towards you.





These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

GVW-251-943-139-FIX

Rear License Plate Light Housing Reinforcement Bracket
1980-1991 Vanagon

- 2) With the bulb wiring still connected, unscrew the Philips head screws holding the plastic lens in place to the housing. You do not need to completely remove the screws but can instead back them out enough to create a smooth surface on the back side of the plastic housing at the screw holes.
- 3) Place the bracket on the back side of the housing and tighten the screws. Hold the bracket firmly against the housing with your thumb as you tighten the screws. The screws do not need to extend far beyond the bracket, but will just bite into the bracket to create a snug fit.



- 4) Slide the rear plastic tab into the slot and snap the housing up into place. If one side is loose, the included nylon washers can be stacked as a shim to adjust the fit.



That's it, You're Ready to Hit the Road!