



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## Floppy Mirror Fix


GW-FLOP-B-GONE

1980-1992 Vanagon

### Tools Needed

- (2) 10mm Wrenches
- Philips #2 Screwdriver
- 10mm Socket + Socket
- Knife

- 1) Remove the mirror from the vehicle using a #2 Philips head screwdriver.
- 2) Disassemble the mirror. Use a 10mm socket to remove the nut from the bottom of the mirror, then remove the spring and spherical washer from the stud.
- 3) Cut the emery cloth into 2 squares, then cut a "+" into the center of each square. Slip the 2 pieces of emery cloth over the stud with both friction surfaces facing each other, as shown.
- 4) Reinstall the spherical washer, spring, and the first nut. Tighten the nut until the spring is compressed, then back off the nut 1/8<sup>th</sup> of a turn. Use two 10mm wrenches to tighten the second nut onto the first nut.
- 5) Reinstall the mirror, using as few motions as possible to adjust it. DO NOT move it again, EVER.

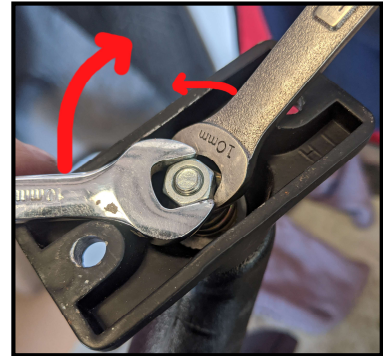

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## Floppy Mirror Fix

GW-FLOP-B-GONE

1980-1992 Vanagon

### Tools Needed

- (2) 10mm Wrenches
- Philips #2 Screwdriver
- 10mm Socket + Socket
- Knife

- 1) Remove the mirror from the vehicle using a #2 Philips head screwdriver.
- 2) Disassemble the mirror. Use a 10mm socket to remove the nut from the bottom of the mirror, then remove the spring and spherical washer from the stud.
- 3) Cut the emery cloth into 2 squares, then cut a "+" into the center of each square. Slip the 2 pieces of emery cloth over the stud with both friction surfaces facing each other, as shown.
- 4) Reinstall the spherical washer, spring, and the first nut. Tighten the nut until the spring is compressed, then back off the nut 1/8<sup>th</sup> of a turn. Use two 10mm wrenches to tighten the second nut onto the first nut.
- 5) Reinstall the mirror, using as few motions as possible to adjust it. DO NOT move it again, EVER.



GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com