






These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

HILIFT-BUMPER-MOUNT

Bumper Mount for Hi-Lift Jack

This kit allows a Hi-Lift jack to be mounted to any 90-degree corner including, but not limited to, the GoWesty plate steel front or rear bumpers.

1. Loosely assemble the small and large brackets using the 10mm bolts, nuts, and washers. The small bracket should still be able to pivot.
2. Secure the brackets to the Hi-Lift jack using the carriage bolts and wing nuts.
3. Position the jack/bracket assembly in place to check for clearance.
4. Mark the position of the mounting brackets and drill holes for the mounting bolts.
5. Remove the jack and small brackets from the large brackets and bolt the large brackets in place. Refit the small brackets and jack and tighten all bolts.

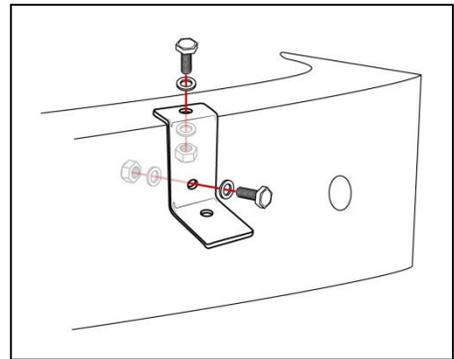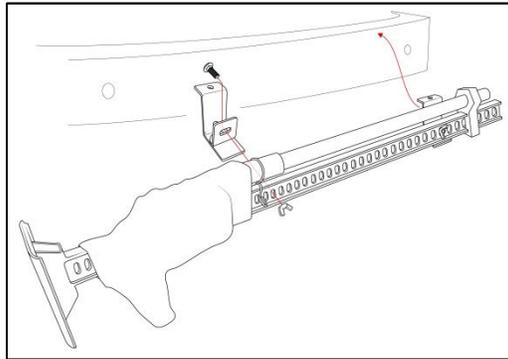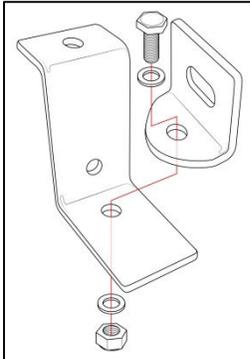

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com






These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

HILIFT-BUMPER-MOUNT

Bumper Mount for Hi-Lift Jack

This kit allows a Hi-Lift jack to be mounted to any 90 degree corner including, but not limited to the GoWesty plate steel front or rear bumpers.

1. Loosely assemble the small and large brackets using the 10mm bolts, nuts, and washers. The small bracket should still be able to pivot.
2. Secure the brackets to the Hi-Lift jack using the carriage bolts and wing nuts.
3. Position the jack/bracket assembly in place to check for clearance.
4. Mark the position of the mounting brackets and drill holes for the mounting bolts.
5. Remove the jack and small brackets from the large brackets and bolt the large brackets in place. Refit the small brackets and jack and tighten all bolts.

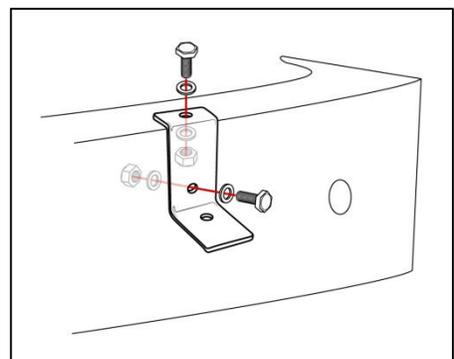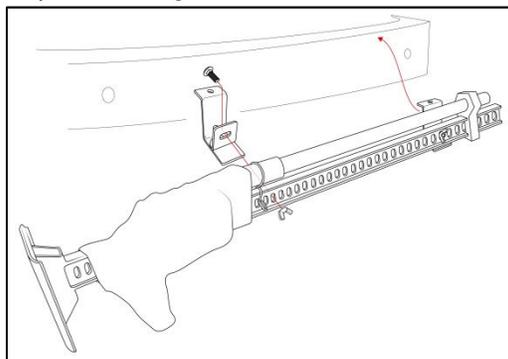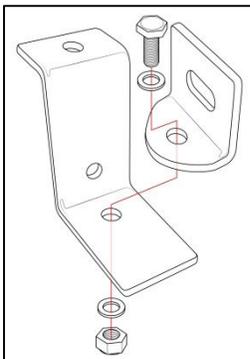

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com