



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


HPSL-KIT

High Pressure Power Steering Hose - Vanagon [80-91]

Installation Notes:

- Install the power steering hose and adapters as shown in the diagram.
- Torque the banjo bolt to 29ft/lbs (40Nm).
- Torque the power steering pressure switch to no more than 22ft/lbs (30Nm).

CAUTION IMPORTANT NOTE: The new orientation of the pressure switch places the electrical connections closer to the alternator housing. If your power steering pressure switch connectors do not have the factory insulation in place, replace them with the included 90° quick connects. Proper length V-belts in good condition are required for proper fit. Pay close attention to this, and make sure there is plenty of clearance between electrical connectors going to the pressure switch (one of which is 12V positive and IS NOT fused) and the alternator. If in doubt: Replace both V-belts NOW.

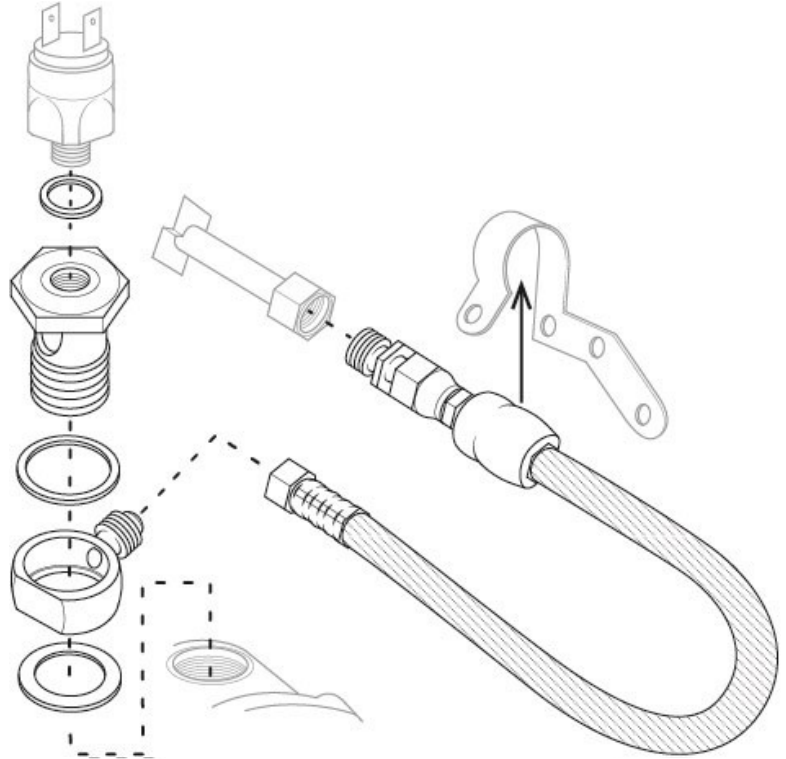

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


HPSL-KIT

High Pressure Power Steering Hose - Vanagon [80-91]

Installation Notes:

- Install the power steering hose and adapters as shown in the diagram.
- Torque the banjo bolt to 29ft/lbs (40Nm).
- Torque the power steering pressure switch to no more than 22ft/lbs (30Nm).

CAUTION IMPORTANT NOTE: The new orientation of the pressure switch places the electrical connections closer to the alternator housing. If your power steering pressure switch connectors do not have the factory insulation in place, replace them with the included 90° quick connects. Proper length V-belts in good condition are required for proper fit. Pay close attention to this, and make sure there is plenty of clearance between electrical connectors going to the pressure switch (one of which is 12V positive and IS NOT fused) and the alternator. If in doubt: Replace both V-belts NOW.

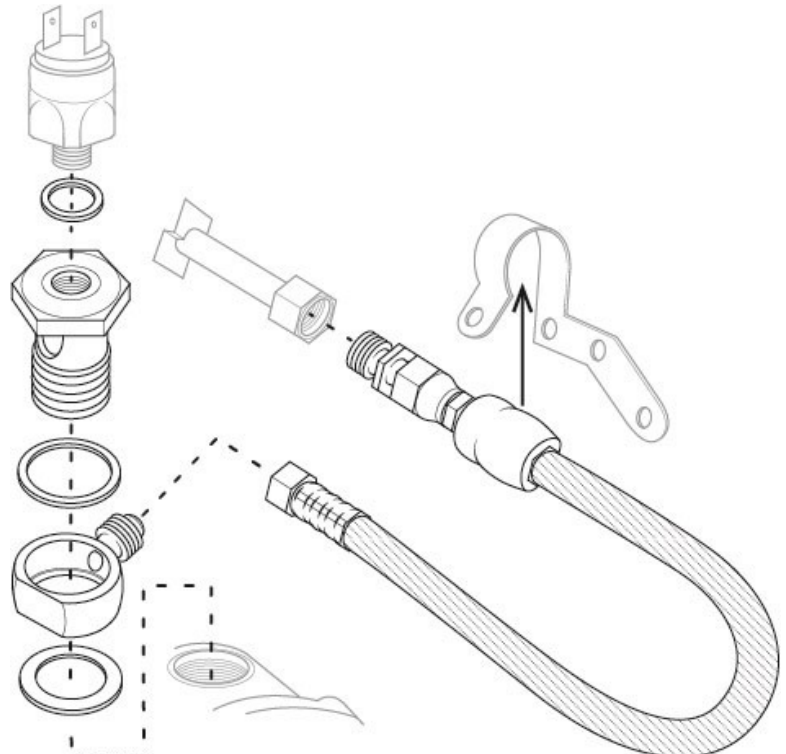

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com