



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

LED-EXT-VANO-RESISTOR


Exterior LED Bulb Kit Resistor Fix

1980-1991 Vanagon

If you have installed our exterior LED bulb kit and are experiencing issues with your turn signals, install these resistors to eliminate the issues!

Installation Instructions

- 1) Remove the front turn signal housing. Fasten the resistor to the body seam behind the housing.
- 2) Thread the resistor wires into the boot, then crimp the included piggyback connectors to the resistor wires.
- 3) Wire the resistor in parallel with the LED bulb: Unplug the brown ground wire and the black turn signal wire from the socket. Attach these wires to the piggyback connectors on the resistor wires, then reconnect these wires to their original terminals on the socket.

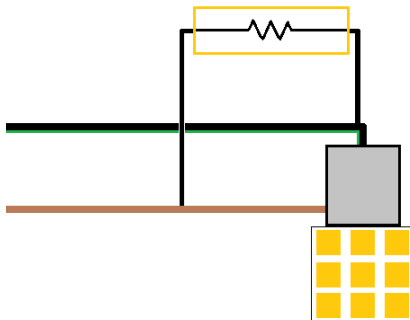

- 4) Reinstall the housing, and repeat the process for the other side.

Your signals are fixed, and now other drivers know where you're going. You're a good person.