




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## RX-W-SPOUT-KIT

### Rotopax Water Container Spout Kit

# DO NOT OVERTIGHTEN THE ELBOW!

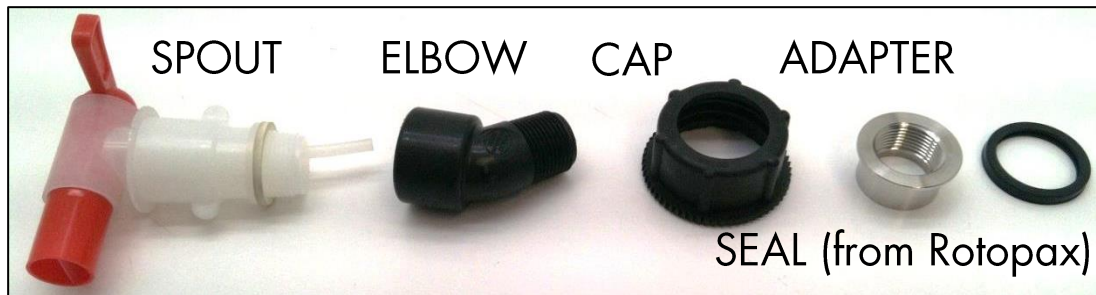

### INSTALLATION INSTRUCTIONS

1. Remove cap and seal from Rotopax to reuse with spout (Fig 1).
2. Fit seal over adapter flange and insert into neck of Rotopax.
3. Screw down cap over adapter.



4. Screw elbow into adapter, being careful not to cross thread it. Do not overtighten – the adapter will usually seal with only a few threads engaged.
5. Remove the white seal from the spout and replace it with the more robust black seal we have included. Discard the white seal. Screw the spout into the elbow. Adjust the angle of the spout by loosening the cap and rotating the elbow. **DO NOT OVERTIGHTEN THE ELBOW.** Retighten the cap.

